




701 Decatur Avenue North, Suite 107 • Minneapolis, MN 55427 • +1-763-746-8034 • www.rjs1.com

## Instructions to change the timeout for Low Power/Auto Off modes and the Back Light level

1. Plug Ethernet cable into network and I-5000
2. Press and hold the <Print> button and then press the <Power> button on I-5000 for status screen and to see IP address
3. Open web browser and enter IP address for I-5000



4. Enter the Username “Admin” and Password “Admin” to log into your I-5000
5. Select “Setup” and then “Power”

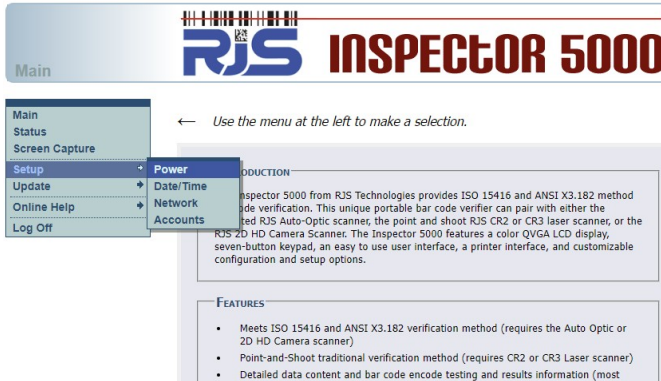

6. Change the Low Power Timeout, Auto Off Timeout, and Back Light Level to your preferred settings and click the “Apply” button

